



# LG Optimus Dynamic II L39C Screen Replacement

Replace a damaged or malfunctioning screen.

Written By: Patrick Barron



## INTRODUCTION

For trouble with touch feedback or if your screen is cracked and you want to replace it.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Remove the back case



 Make sure not to push the tool into the USB port. Doing so may cause damage to your phone.

- Hold the blue plastic opening tool at the edge of the USB opening. Push down and pry the case off the phone gently.

## Step 2 — Remove the Battery



- Lift the battery out of the phone and replace with your new one.



### Step 3 — Remove the SD Card



- Grab the end of the SD Card and pull it out of the phone.

### Step 4 — Remove the screws from the midframe



- Use the PH #000 screwdriver to remove the six screws from the midframe

## Step 5 — Remove the midframe




- Using the plastic opening tool, work gently to go around the perimeter of the phone and remove the midframe.

## Step 6 — Disconnect the screen from the motherboard



- Use the plastic opening tool to disconnect the small orange tab from the motherboard.
- Next disconnect the silver tab slightly above where the orange tab was.

## Step 7 — Separate the screen and motherboard

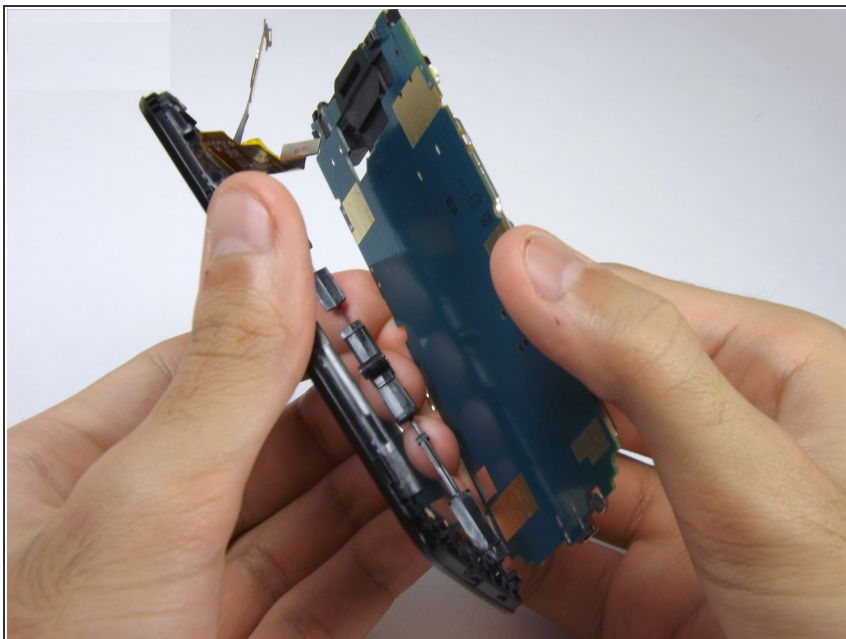

- Gently feed the orange and silver tabbed ribbons through the hole in the motherboard and the screen will be free.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:36:55 PM.